HOO 504 - 505 - 545

(D) INSTALLATIONSANGABEN

Mindestabstand zur Kochfläche: 65 cm (Elektroplatten), 75 cm (Gas-, Öl-, Kohlekochplatten)

(GB) INSTALLATION SHEET

Minimum distance above cooker: 65 cm (electric cookers), 75 cm (gas, gas oil or coal cookers)

(F) FICHE D'INSTALLATION

Distance minimale par rapport à la cuisinière : 65 cm (cuisinière électrique), 75 cm cuisinière à gaz, mazout ou charbon).

(NL) INSTALLATIESCHEMA

Min. afstand van het kooktoestel: 65 cm (elektrische kooktoestellen) 75 cm (kooktoestellen op gas, olie of kolen)

(E) FICHA DE INSTALACIÓN

Distancia mínima desde los quemadores: 65 cm (quemadores eléctricos), 75 cm (quemadores a gas, gasóleo o carbón)

(P) FICHA DE INSTALAÇÃO

Distância mínima do fogão: 65 cm. (fogões eléctricos), 75 cm. (fogões a gás, óleo ou carbono)

(I) SCHEDA INSTALLAZIONE

Distanza minima dai fuochi: 65 cm (fuochi elettrici), 75 cm (fuochi a gas, gasolio o carbone)

(GR) ΚΑΡΤΕΛΑ ΕΓΚΑΤΑΣΤΑΣΗΣ

Ελάχιστη απόσταση από τις εστίες: 65 cm (ηλεκτρικές εστίες), 75 cm (εστίες αερίου, πετρελαίου ή με κάρβουνα)

(S) INSTALLATIONSBLAD

Minsta avstånd från olika typer av spisar: 65 cm (elektrisk spis), 75 cm cm (gasspis, gasolspis och koleldad spis)

(DK) INSTALLATIONSKORT

Minimumafstand fra kogezonerne: 65 cm (elplader), 75 cm (gas-, gasolie- eller kulkogezoner)

(N) MONTERINGSANVISNING

Avstand til komfyrtopp: minst 65 cm (elektrisk), minst 75 cm (gass-, olje- eller vedkomfyr)

(FIN) ASENNUSOHJEET

Vähimmäisetäisyys liesistä: 65 cm (sähkölevyt), 75 cm (kaasu-, öljy- tai hiililiedet)

HOO 504 - 505 - 545

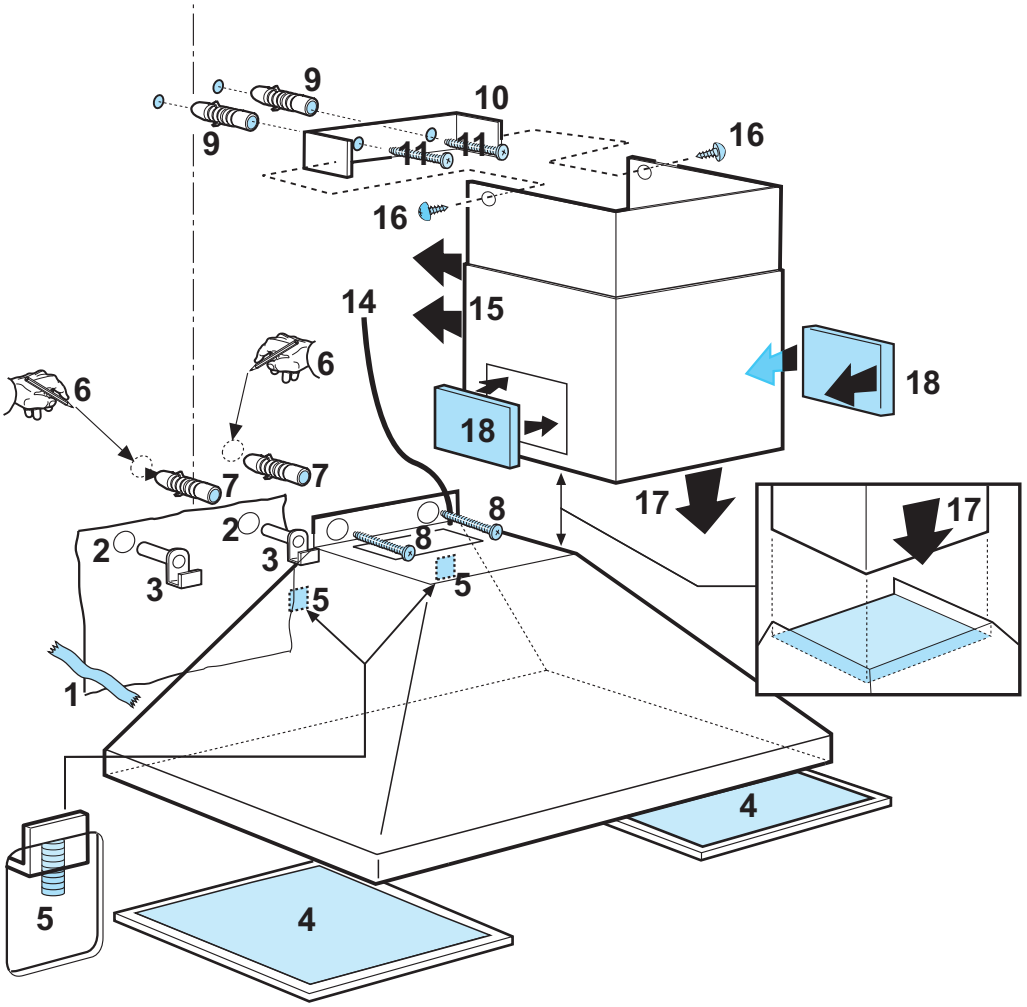

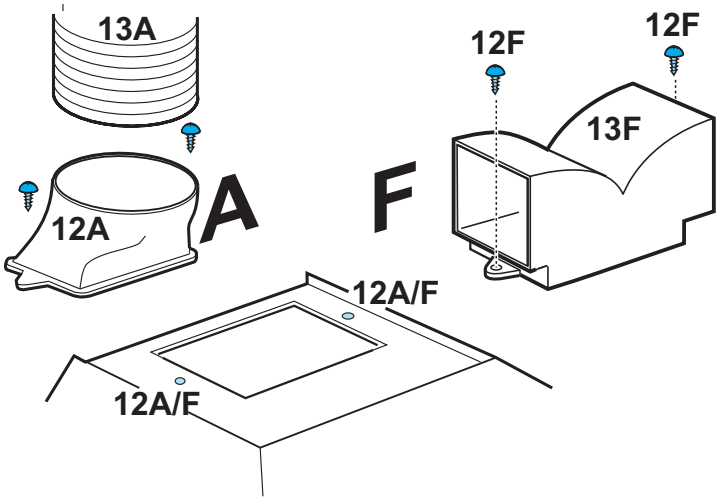

HOO 504 - 505 - 545 PRODUCT DESCRIPTION SHEET

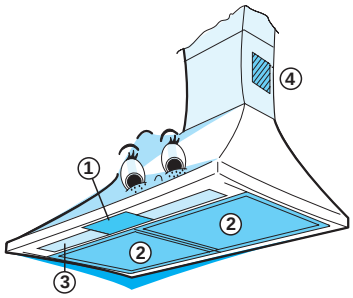

1. Control panel
2. Grease filter
3. Lighting unit
4. Telescopic flue

REMOVING AND RENEWING OR CLEANING THE GREASE FILTER:

1. Unplug the appliance or switch off the mains power supply.
2. **a** - push the handles backwards
   b - and then downwards.
3. After substituting or cleaning the grease filter (depending on model) remount in reverse order, making sure the entire extraction surface is covered.

MOUNTING OR REPLACING THE CARBON FILTER:

1. Unplug the appliance or switch off the mains power supply.
2. Removing the grease filters.
3. If the carbon filters are already mounted (two filters covering the motor-blade grille) and need substituting, turn the central handle anticlockwise until the filters release.
4. If the filters are not mounted, fit one on each side covering both the motor protection grilles. Turn the central filter handle clockwise.
5. Refit the grease filters.

REPLACING BULBS

1. Unplug the appliance or switch off the mains power supply.
2. Remove the grease filters.
3. Remove the lighting unit from the clips that fix it to the hood body.
4. Remove the burnt-out bulb.
   Use 40W max (E14) bulbs only.
5. Remount the lighting unit

CONTROL PANEL

A. Light switch.
B. Speed selector.

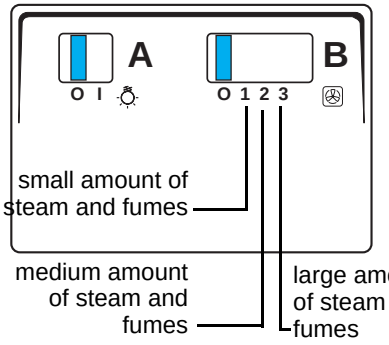

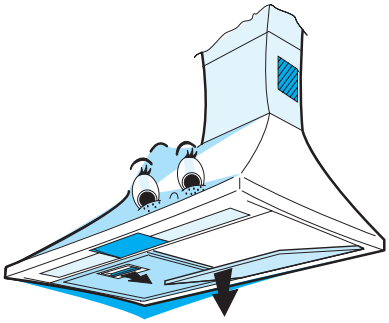

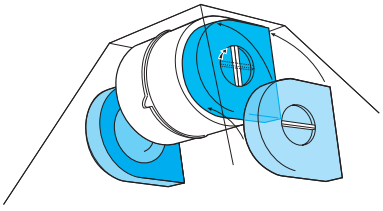

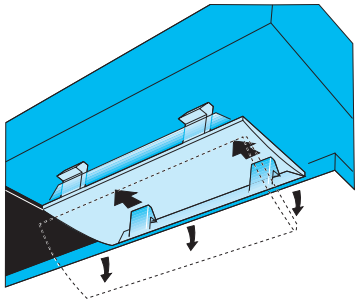

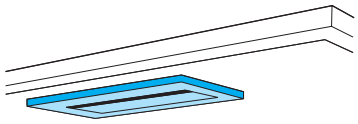

D GB F NL E P I GR S DK N FIN